
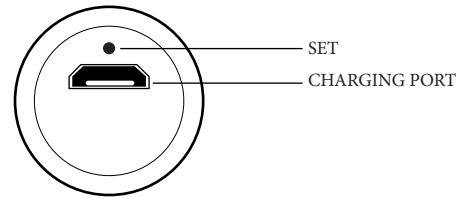


POWER WAND MOTOR PROGRAMMING GUIDE

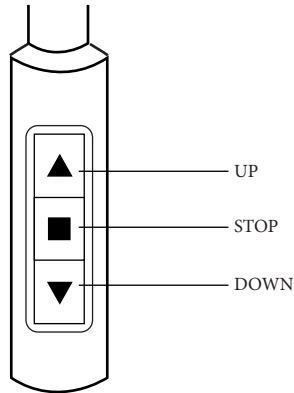

BOTTOM VIEW OF WAND HANDLE

1 Change motor direction (if needed)

Check the direction of the motor by pressing **UP** or **DOWN**. If direction **DOES** match with the button pressed, then continue to the next section with step 2. If direction **DOES NOT** match with the button pressed then change motor direction.

To change motor direction press **STOP for 5 seconds**, the motor will then jog, then slightly press **DOWN**, and the motor will jog once again. The direction is now inverted.

2 Modify Limits (If Needed)

NOTE: Your blinds will come with pre programmed operating limits.

NOTE: The motor will quit setting mode automatically after being idle for 30 seconds.

Adjust Bottom Limit:

- Press **DOWN** and let blind travel downward to pre-set bottom limit. Press **SET** once on wand handle, the motor will jog. Press **UP** or **DOWN** to fine tune the bottom limit position. Press **SET** once again to confirm the new bottom limit position, the motor will jog saving your settings.

Adjust Upper Limit:

- Press **UP** and let blind travel upward to pre-set upper limit. Press **SET** once on wand handle, the motor will jog. Press **UP** or **DOWN** to fine tune the upper limit position. Press **SET** once again to confirm the new upper limit position, the motor will jog saving your settings.

OPTIONAL ACTIONS & SETTINGS

1 Set Intermediate Limit

Place blind at desired position, press **SET** on the bottom of the wand handle, the motor will jog once. Press **SET** again, the motor will jog again and the intermediate position is now saved.

2 Delete Intermediate Limit

NOTE: You cannot delete upper or lower limits, only adjust them.

Let the blind travel to the intermediate position. Press and **HOLD SET** on the bottom of the wand handle for **7 seconds**. Motor will jog when first button is pressed and jog a second time after 7 seconds. Your limit is now erased.

3 Bypass Intermediate Limit In Operation

Operating the blind to an intermediate stop and how to bypass and travel fully to the upper or lower limit:

Press direction button on the wand handle, pause, and press again. The blind will bypass all saved intermediate positions and travel fully up or down.

CHARGING INSTRUCTIONS

We recommend operating the blind at least once a day for better maintenance and longer lifespan of the motor. Operating the blind once per day, the battery of the motor should last 3 to 6 months. When battery is low, the motor might run slower than usual and will beep during operation. To recharge the motor, attach the charger cord to the port located on the bottom of the wand handle and plug in to current for 6 hours. After a 6 hour charge, remove the charger cord.



Save On Blinds

699 Gardiners Rd. Unit 4, Kingston, ON

Customer service: 613 900 1971

hello@SaveOnBlinds.com

www.SaveOnBlinds.com