
REMOTE CONTROL MOTOR PROGRAMMING GUIDE

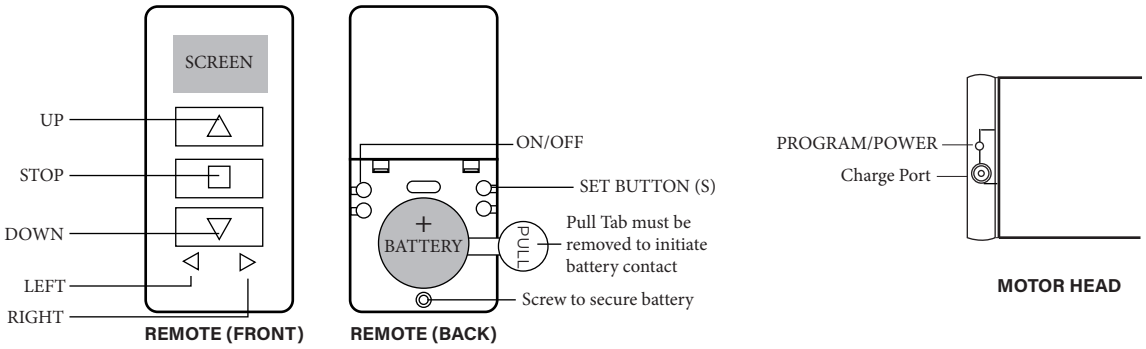

MAIN PROGRAMMING

0 Power ON/OFF

ON: Press **PROG** on motor head for 1 sec until motor beeps once

OFF Press **PROG** for 7 seconds until motor beeps once.

1 Pair Remote With Motor

Select Channel on remote by pressing **LEFT** or **RIGHT**.

Press **PROG** on motor head, until motor beeps and oscilates.

Press **UP** within 10 secs. The motor will oscilate again and be paired to the remote.

2 Change Motor Direction (If Needed)

Test motor direction by pressing **UP** or **DOWN**. If direction coincides then no further action is required.

If direction does not coincide then **press and hold STOP** for 5 seconds until motor oscilates, then **press DOWN** until motor jogs again. Direction is now inverted.

3 Modify Limits (If Needed)

NOTE: Your blinds will come with pre programmed operating limits.

Adjust Bottom Limit:

- Press **DOWN** and the shade will run down to pre set limit. Press **SET (S)** once and the motor will jog. Press **UP** or **DOWN** to fine tune bottom limit position. Press **SET (S)** to set the bottom limit.

Adjust Upper Limit:

- Press **UP** and the shade will run up to pre set limit. Press **SET (S)** once and the motor will jog. Press **UP** or **DOWN** to fine tune bottom limit position. Press **SET (S)** to set the upper limit.

OPTIONAL ACTIONS & SETTINGS

Set Intermediate Limit

Place blind at desired position. **Press and hold SET** and the motor will oscilate. Then press **UP/DOWN** to adjust position. **Press SET again**. The intermediate limit is now set.

Adding a Secondary Remote

Press and hold STOP on **primary** remote for 5 seconds. Release when motor jogs, then press **UP** on **secondary** remote. Motor will jog again and the secondary remote is also paired now..

Channel Locking & Unlocking

Using **LEFT & RIGHT,** select desired channel you wish to lock the remote on. **Press STOP & RIGHT** buttons together until the selected channel flashes or CC is displayed.

To Unlock follow the exact same process.

Buetooth Setting Mode

Press PROG on motor head 4 times, press for a fifth time and **hold down** until motor oscilates twice. The motor is now in Bluetooth setting mode. Open "LL OneTouch" APP to find devices.

CHARGING INSTRUCTIONS

We recommend operating the blind at least once a day for better maintenance and longer lifespan of the motor. Operating the blind once per day, the battery of the motor should last 4 to 6 months. When the battery is low, the motor might run slower than usual and will beep during operation. To recharge the motor, attach the charger cord to the port located on the head of the motor and plug it into the current for 4 hours. After a 4 hour charge, remove the charger cord.

Save On Blinds
699 Gardiners Rd. Unit 4, Kingston, ON
Customer service: **613 900 1971**
hello@SaveOnBlinds.com
www.SaveOnBlinds.com