
RECHARGEABLE REMOTE CONTROL MOTOR PROGRAMMING GUIDE

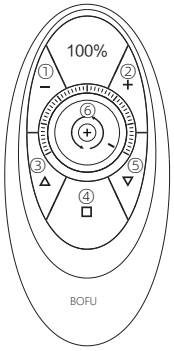

1) Left (Previous Channel)

2) Right (Next Channel)


3) Up

4) Stop


5) Down

6) Dial

REMOTE (FRONT)

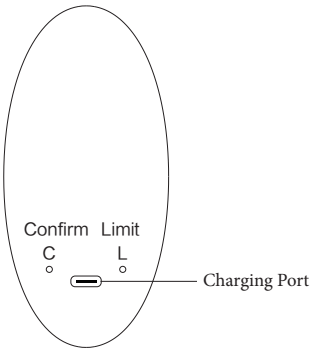

REMOTE (BACK)

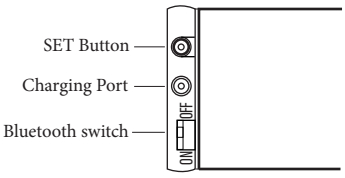

MOTOR HEAD

NOTE: After programming your blinds, you can operate them by using either the UP and DOWN buttons or by turning the dial in the remote. Turning the dial will let you choose any position for the blind within the operationg range, 0% representing the upper limit and 100% the bottom limit.

NOTE: After 5 seconds of inactivity, the screen in the remote will turn off. To turn on, press any button.

0 Program the Dial (If needed)

If the screens displays SET 1 when turned on, please follow the instructions below. If it DOES NOT then please move on to Step 1: Pair Remote With Motor.

- Turn the dial to the starting point, then **press & hold CONFIRM (C)** for 3 seconds. The screen should now display SET 2.
- Turn the dial to the end point, then **press & hold CONFIRM (C)** for 3 seconds. The screen should now display OK.

1 Pair Remote With Motor

Select Channel on remote by pressing **LEFT** or **RIGHT**.

Press **SET** on motor head, press **CONFIRM (C)** in remote.

The motor jogs and now the blind has been paired to that channel in the remote.

2 Change Motor Direction (If Needed)

Test motor direction by pressing **UP** or **DOWN**. If direction coincides then no further action is required.

If direction does not coincide then **press and hold LIMIT (L)** for a couple of seconds until motor jogs, then **press and hold STOP** until motor jogs again. Direction is now inverted.

3 Modify Limits (If Needed)

NOTE: Your blinds will come with pre programmed operating limits.

NOTE: Adjusting the upper or lower limit cannot bedone individually. Both have to be adjusted and set each time we enter sentting mode.

Set Bottom Limit:

- **Press and Hold LIMIT (L)** until motor jogs. Press **DOWN** and the shade will run down. Press **STOP** when close to desired bottom limit. Press **UP** or **DOWN** to fine tune bottom limit position. Press **CONFIRM (C)** to set the bottom limit.

Set Upper Limit:

- Press **UP** and the blind will run up. Press **STOP** when close to desired upper limit. Press **UP** or **DOWN** to fine tune position. Press **CONFIRM (C)** to set upper limit.

OPTIONAL ACTIONS & SETTINGS

Set Intermediate Limit

Place blind at desired position. **Press and hold LIMIT** and then press **UP** while still holding LIMIT. **Release** both buttons when motor jogs. Press **STOP**. The intermediate limit is now set.

Pair/Unpair Secondary Remote

Pair Secondary Remote:

- **Press and hold LIMIT (L) & CONFIRM (C)** on **primary** remote. Release when motor jogs, then press **CONFIRM (C)** on **secondary** remote. Motor will jog again and the secondary remote is also paired now..

Unpair Secondary Remotes:

- **Press and hold LIMIT and DOWN** on **primary** remote. **Release** both buttons once motor jogs. All remotes have now been upaired exept for primary remote.

Unpair principal remote:

- Press **CONFIRM (C)** 3 times to unpair the remote from the motor

Maximum Channel Lock

Press & hold the DIAL button on preferred channel (e.g. CH7) until MAX07 appear on screen. No channels beyond that one will be accessible now.

To undo channel lock, **go to channel ALL and press & Hold DIAL button.**

Add/Remove Child Lock

Press **LIMIT (L)** 3 times to add/remove the child lock. The channel cannot be switched in child lock status.

CHARGING INSTRUCTIONS

We recommend operating the blind at least once a day for better maintenance and longer lifespan of the motor. Operating the blind once per day, the battery of the motor should last 4 to 6 months. When the battery is low, the motor might run slower than usual and will beep during operation. To recharge the motor, attach the charger cord to the port located on the head of the motor and plug it into the current for 4 hours. After a 4 hour charge, remove the charger cord.

To recharge remote, attach the charger cord to the port located on the back and plug it into the current for 4 hours

Save On Blinds | 699 Gardiners Rd. Unit 4, Kingston, ON
Customer service: **613 900 1971**
hello@SaveOnBlinds.com | www.SaveOnBlinds.com